

Preparation points



Fuse installation.



Set the goods' gravity center to the center of the loading board.



Fasten the goods with straps.




Insert the plug under the battery base before the first use. No need to remove it then.



Adjust the L-type handle and back panel to the suitable position.

Please watch the **operation video** before use, and practice without load.


Upstairs and downstairs operation points

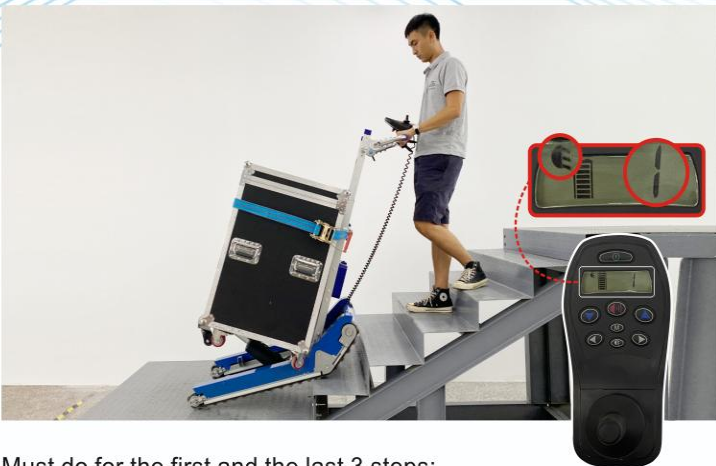

Must do for the first and the last 3 steps:
1. Loading board automatic adjusting mode,
2. speed 1.



Must do for the last step upward:
Climb to the balance point where you can press down the machine to the upper platform easily and stop, continue after the loading board complete the automatic adjusting.

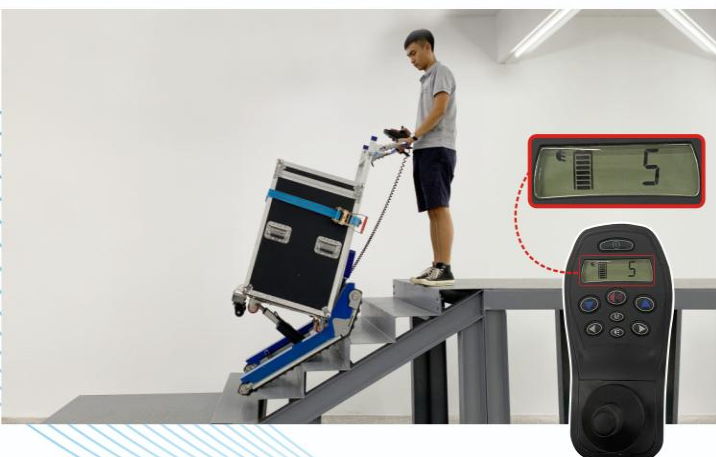

The climbing speed will be reduced while adjusting under the automatic adjusting mode, and will be restored after completion.



With manually adjusting mode, must carefully keep balance by adjusting the cargo's gravity center.

Other operation points



Moving on the ground:

Move with casters on the flat ground.
Move with tracks if the ground is not even or with slope bigger than 5° instead of with casters.



Parking:

Parking it on the horizontal ground stably,
or raise the loading board and parking with tracks.



Do not reach under the load plate,
rotating part and tracks while operation.

Wrong operation



Stand under the machine
while it's operating.



Use manual mode for the last
step upward and first step
downward.



Incorrectly set the adjustable
strap holder.



Move with casters on ground
with slope bigger than 5°.

Battery-related

Tip: Remember to switch off the joystick and the battery after use.

1. Please remove the battery from the machine before charge it.
2. Do not overcharge the battery. It takes about 4.5 hours to fully charged, please check the charging indicator light for reference.
3. Status of charge:
 - ● 2 red indicator lights means charging now.
 - ● 1 red and 1 green indicator light means charging completed.

This icon on battery means the battery is full.

4. If the battery needs to be stored for a long time, recharge it every three months to 50% capacity, otherwise it will seriously affect the life of the battery.

